

Tuya Zigbee PIR Motion Sensor User manual



* Please read this manual carefully before use,
and keep it for future reference

Product Parameters

USB Input voltage: DC5V/ 2A

Battery Input voltage: DC3V LR03

Static Current: $\leq 35\mu\text{A}$

Working current: $\leq 15\text{mA}$

Low-voltage notification: $\leq 2.4\text{V}$

zigbee operating frequency: 2.400GHz-2.484GHz

Detecting Distance: 6M


Detecting Angle: 360° Ceiling Mounted

Working Temperature: $-10^{\circ}\text{C}\sim+50^{\circ}\text{C}$

Working Humidity: $\leq 95\% \text{ RH}$

How to use:

1. According to the arrow indication on the case, open the mounting bracket and load the battery, the indicator is always on for one second and goes out.

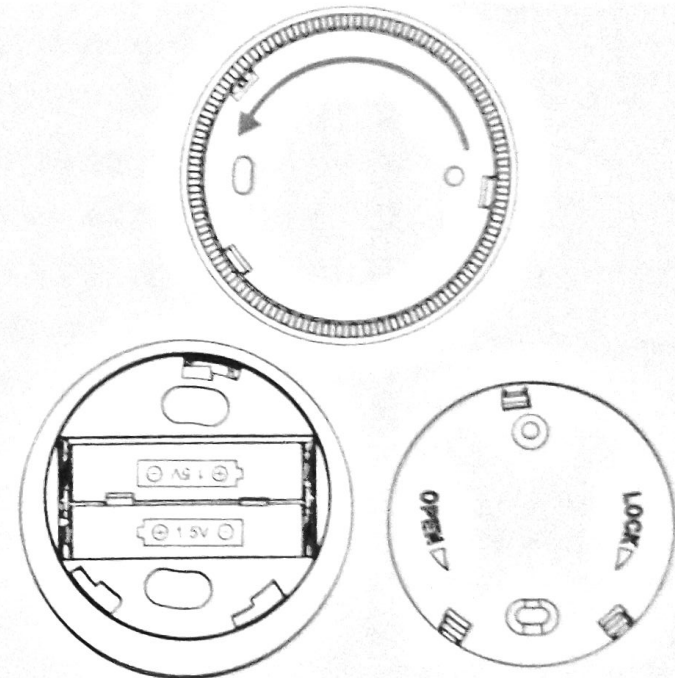

1

2

2. Download Tuya Smart App in application store, or scan the below QR code (Zigbee sensors can't work alone, have to pair to tuya zigbee gateway to work)



iOS/Android