

During the warranty period, the following situations are not covered by the warranty

- Improper use leading to human damage
- Damage due to improper transportation after sale
- Damage caused by failure to use the original accessories of the company as required
- Any selfmodified, disassembled and repaired product
- Replacement of wear parts
- Any natural wear

V. common problems

1. After the receiving switch is turned on, the blisters backlight will flash, which is a working signal indicating that it is in the receiving state, which is a normal phenomenon;
2. The laser line flashes to prove that the machine is not in the setting range, please adjust the level through the legs;
3. The laser line appears blurred. Please wipe the outer glass with a clean cotton cloth.

VI. Safety precautions

1. Because of Laser radiation should not look directly at the laser beam;
2. Class 2 laser crystal, harmless to human body;
3. Strictly forbidden to heavy press or vibrate;
4. The product shall be placed in the warehouse with ventilation, drying, heat-insulated and fireproofing, and it is strictly prohibited to contact with corrosive materials;
5. Loading, unloading and use of products shall be handled gently, and shall not be thrown or dropped;
6. Quality inspection certificate and packing list are attached in the packing box.

VII. Daily maintenance and attentions

1. Daily maintenance
 - 1) Please store the machine in a dry, ventilated, constant temperature and dust-free place;
 - 2) please wipe the shell glass frequently to ensure the light transmission;
 - 3) when not in use for a long time, please release the locking switch for half an hour regularly to ensure that the bearing swings flexibly.
2. Attentions
 - 1) non professionals, do not disassemble the machine;
 - 2) please avoid severe vibration, collision and falling of the machine;
 - 3) please pay attention to lock the locking switch after use;
 - 4) do not leave the battery in the machine to avoid leakage of battery liquid;
 - 5) do not look directly at the laser line. It should be used with protective glasses;
 - 6) do not wipe the instrument with organic solvent.

Certificate

Name: _____
 Examiner: _____
 Model: _____
 Date: _____
 No.: _____

- ★ User save copy (please save this part properly)
- Warranty Card The user must present a copy of the card and an official invoice at the time of warranty to confirm your warranty service.

User name :

Mr./Ms.: _____ Age: _____
 Name of the work unit: _____
 Occupation: Student Worker Woodworking Metalworking
 Concreting Renovation Hardware Hydropower Engineering
 Others _____
 Address: _____ Province _____ City _____ Road / Street _____ No. _____
 Zip code: _____ Tel.: _____ Fax: _____
 Mobile phone: _____ Product number: _____
 Date of purchase: _____ Invoice receipt number: _____
 Purchase company name: _____
 Purchaser's address: _____
 Purchaser's phone: _____
 Purchaser's seal: _____

Please note that the conditions listed on the back are not guaranteed.

● Receipt (please fill it in and send back)

To ensure that you can enjoy the above warranty service, please fill in all forms and send the "receipt" back to our company within 7 days, which will take effect on the date of receiving the receipt!


User name :

Mr./Ms.: _____ Age: _____
 Name of the work unit: _____
 Occupation: Student Worker Woodworking Metalworking
 Concreting Renovation Hardware Hydropower Engineering
 Others _____
 Address: _____ Province _____ City _____ Road / Street _____ No. _____
 Zip code: _____ Tel.: _____ Fax: _____
 Mobile phone: _____ Product number: _____
 Date of purchase: _____ Invoice receipt number: _____
 Purchase company name: _____
 Purchaser's address: _____
 Purchaser's phone: _____
 Purchaser's seal: _____

LASER LEVEL METER

MAX LIGHT

User manual

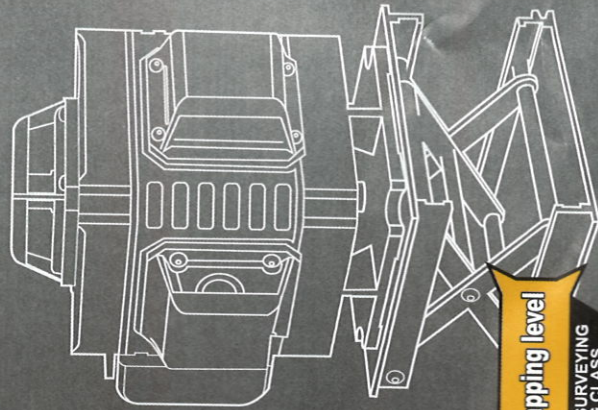

Professional mapping level

PROFESSIONAL SURVEYING
AND MAPPING CLASS