
D100∩eo

AC/DC Multi-Function Smart Charger

Instruction Manual

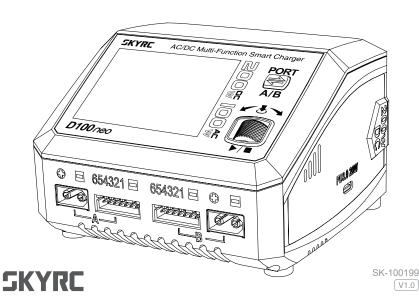

SKYRC D100neo Instruction Manual

Introduction	1
Package	1
Meet D100neo	2
Specification	3
Warning	5
Standard Battery Parameters	6
Explanation of Buttons	7
Program Flow Chart	8
Power and Battery Connection	10
Charging	11
Lithium Battery Program(LiPo/LiFe/Lilon/LiHV)	13
NiMH/NiCd Battery Program	14
Pb Lead-Acid Battery Program	15
Charger Master	16
DC Power	17
USB Type-C PD/QC3.0 Output	17
Voltage Calibration (For expert user only)	18
Charge Settings	18
System Setting	19
Firmware Upgrade	20
Errors and Warnings	21
Conformity Declaration	22
Warranty and Sery	23

Introduction

Introducing the SkyRC D100neo AC/DC Multi-Function Smart Charger, an enhanced version of the D100.

With dual independent ports and compatibility with various RC batteries, it adapts to different chemistries. It can act as a dual-output digital power, offering adjustable voltage (2V-27V), and current (0.2A-10A) per output. The 20W USB-C PD 3.0 charging port allows rapid charging of smartphones, tablets, and the 2020 MacBook Air.

Connect effortlessly via Type-C, and control it with Charger Master on PC, or Mac.

Before using it for the first time, it is crucial to carefully read through the instructions, warnings, and safety tips provided. Improperly charging a battery or misusing the charger can lead to potentially hazardous situations such as fire or explosion.

Package



SkvRC D100neo charger*1




User Manual*1



AC power Cord*1

Meet D100neo

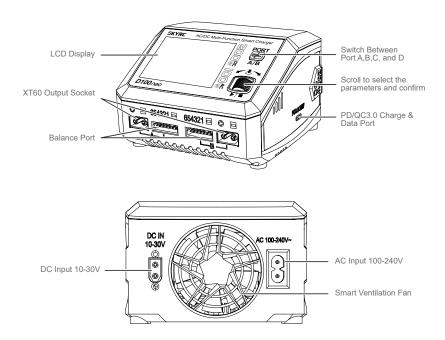

Specification

Item	Option	Specification		
Model		D100neo		
Input Voltage	AC	100-240V (50/60Hz)		
input voltage	DC	10V-30V		
Input Current	DC	18A		
Charge Power	AC	A: 0-100W B: 0-100W A+B=100W		
Charge Fower	DC	A: 0-100W B: 0-100W A+B=200W		
Discharge Power	Main Port	5W		
Discharge Fower	Main Port+Balance Port	30W Max (LiPo/6S)		
Charge Current LiPo/LiFe/Lilon/LiHV/ NiMH/NiCd/Pb		0.2-10.0A		
Discharge Current LiPo/LiFe/Lilon/LiHV/ NiMH/NiCd/Pb		0.1-2.0A		
Balance Current	LiPo/LiFe/Lilon/LiHV	1000mA Max		
Trickle Charge Current NiMH/NiCd		200mA & OFF		
	LiPo/LiFe/Lilon/LiHV	1-6S		
Battery Types	NiMH/NiCd	1-15S		
	Pb	3S/6S/12S		
	LiPo/LiFe/Lilon/LiHV	Balance CHG, Charge, Discharge, Storage		
Working Modes	NiMH/NiCd	Normal, Discharge, Re-Peak, CYCLE_D_C, CYCLE_C_D		
	Pb	Charge, AGM Charge, Cold Charge, Discharge		

Item	Option	Specification
	Voltage	5.0-27.0V
DC Power Supply	Current	1.0-10.0A
	Power	100W Max
LICE Time C Output	QC3.0	5V=3A, 9V=2A, 12V=1.5A 18W
USB Type-C Output	PD	5V=3A, 9V=2.2A, 12V=1.67A 20W
Size	Length*Width*Height	116*110*79mm
Weight	Net Weight	470g
Working	Working Temperature	0°C-40°C
Environment	Working Humidity	0-80%
Storage	Storage Temperature	-10°C-60°C
Environment	Storage Humidity	20%-70%

Warning

D100neo is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the charger by a person responsible for their safety.

Failure to exercise caution while using this product and comply with the following warnings could result in a product malfunction, electrical issues, excessive heat, FIRE, and ultimately injury and property damage.


- ⚠ Never leave charging batteries unattended during use.
- ⚠ Never charge batteries overnight.
- ⚠ Never attempt to charge dead, damaged, or wet battery packs.
- ⚠ Never charge batteries in extremely hot or cold places or place in direct sunlight.
- ↑ Never charge a battery if the cable has been pinched or shorted.
- ⚠ Never attempt to dismantle the charger or use a damaged charger.
- ⚠ Never attach your charger to both an AC and a DC power source at the same time.
- ⚠ Always use the charger with the correct charging and discharging program.
- ⚠ Always use only rechargeable batteries designed for use with this type of charger.
- ⚠ Always operate the charger away from flammable and explosive materials.

Standard Battery Parameters

	LiPo	Lilon	LiFe	LiHV	NIMH	NiCd	Pb
Nominal voltage	3.7V/cell	3.6V/cell	3.3V/cell	3.8V/cell	1.2V/cell	1.2V/cell	2.0V/cell
Max. charge voltage	4.2V/cell	4.1V/cell	3.65V/cell	4.35V/cell	1.5V/cell	1.5V/cell	2.4V/cell
Storage voltage	3.8V/cell	3.7V/cell	3.3V/cell	3.85V/cell	N/A	N/A	N/A
Allowable fast charge current	≦ 1C	≤ 1C	≤ 4C	≦ 1C	1C-2C	1C-2C	≦ 0.4C
Min. discharge voltage	3.0-3.4V/ cell	2.9-3.3V/ cell	2.6-3.0V/ cell	3.1-3.5V/ cell	0.6-1.0V/ cell	0.6-1.0V/ cell	1.8-2.0V/ cell

Select the correct operating procedure in accordance with the battery parameters. Incorrect settings may cause the battery to burn or even explode.

Explanation of Buttons

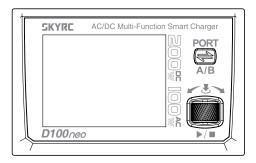



Port Switch Button

Switch Between Ports A and B



Scroll Button


Navigate through Ports A and B in the home menu

Short-press to enter into parameters setting and confirm your selection.


Scroll the wheel to select different menus or adjust parameters.

Press and hold the scroll wheel for two seconds to access the system setting menu.

Program Flow Chart

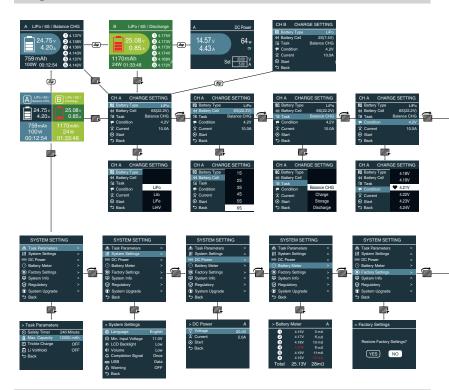

Note: This flow chart provides an example for one port, and the charts for the four ports (Ports A and B) are identical

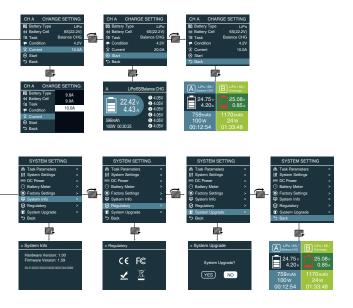


Power and Battery Connection

1. Connect to power source

There are two options of inputs for SKYRC D100neo: AC 100-240V or DC 10-30V.

AC 100-240V





*12V DC Battery or 10-30V DC Power Supply

ı iPo

2. Connect the battery




TO AVOID SHORT CIRCUITS, ALWAYS CONNECT THE CHARGE LEADS TO THE CHARGER FIRST AND THEN TO THE BATTERY. REVERSE THE SEQUENCE WHEN DISCONNECTING.

1) LiPo Battery Connection with Balance Adapter

For safety reasons, it is highly recommended to charge Lithium batteries (LiPo, Lilon, LiFe and LiHV) using Balance CHG mode unless the battery comes without a balance connector.

The battery balance connector must connect to the charger with the black wire aligned with the negative marking. Ensure correct polarity!



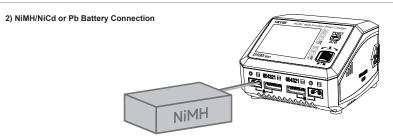

Charging

Various operations are applicable depending on the battery type. This chart illustrates which operations are relevant for different types of batteries.

Battery Type	Working Mode	Description
	Balance CHG	This mode is to balance charge the lithium battery based on the charging rate the user set. It can balance each cells of the battery.
LiPo Lilon	Charge	This mode is to charge the lithium battery based on the charging rate selected.
LiFe LiHV	Storage	This mode is to store the battery via charging or discharging its votlage to a specific storage value.
	Discharge	This mode is to dishcarge the lithium battery based on the discharging rate selected.

Battery Type	Working Mode	Description
	Charge	This mode is to charge the NiMH/NiCd battery based on the charging rate selected.
	Discharge	This mode is to discharge the NiMH/NiCd battery based on the discharging rate selected.
NiMH NiCd	Re-Peak	In re-peak charge mode, the charger can peak charge the battery twice in a row automatically. This is good for confirming the battery is fully charged.
	Cycle_D_C	1 to 3 cyclic and continuous process of discharge>charge is operable for refreshing and restoring the performance of NiMH/NiCd batteries.
	Cycle_C_D	1 to 3 cyclic and continuous process of charge>discharge is operable for refreshing and restoring the performance of NiMH/NiCd batteries.
	Normal	This mode is to charge the Pb battery based on the charging rate selected.
Die	AGM Charge This mode is to charge the AGM battery based on	This mode is to charge the AGM battery based on the charging rate selected.
Pb	Cold Charge	This mode is to charge the Pb battery under a low temperature based on the charging rate selected.
	Discharge	This mode is to discharge the Pb battery based on the discharging rate selected.

Lithium Battery Program(LiPo/LiFe/Lilon/LiHV)

The following flowchart is a reference to set the program manually.

Scroll to select the port and short-press to confirm.



Enter CHARGE SETTING

Short-press the Scroll Wheel to enter the CHARGE SETTING.



Start

Back
 Bac

CH A

Battery Type

III Battery Cell

Condition

Current

Start

CH A CHARGE SETTING #0 Battery Type #10 Battery Cell #2 Task #4 Condition Cal A Current Lilo and

LiFe

LiHV

25

35

48

5S

Select Battery Type

Short-press the Scroll Wheel to call out the Battery Type menu, and scroll to select LiPo.



Select Battery Cell

Scroll to Battery Cell to call out the menu and scroll to select the correct battery cells.





Select Task

Scroll to Task, call out the menu and scroll to select the working mode.



Select Condition

Scroll to Condition, call out the menu and select the terminal charging voltage.



Set Charge/Discharge Current

Scroll to Charge/Discharge Current, call out the menu and scroll to select the current.



Start

Short-press the Scroll Wheel to confirm and initiate the program.





Stop

Short-press the Scroll Wheel to stop the program. If confirm to stop, short-press the Scroll Wheel again to confirm. If not stop, short-press the Port button to back.

NiMH/NiCd Battery Program

Scroll to select the port and short-press to confirm.



ENTER CHARGE SETTING

Short-press the Scroll Wheel to enter the CHARGE SETTING



A Temp Cut-off

Start

← Back

-7mV

-8mV

-9mV

Select Condition

Scroll to Condition, call out the menu and set the delta voltage.



PB

28

38

48

58

65

Charge

Re-Peak

CYCLE C D

CYCLE D C

14.

Select Battery Type

Short-press the Scroll Wheel to call out the Battery Type menu, and scroll to select NiMH



Set Charge/Discharge Current

Scroll to Charge/Discharge Current, call out the menu and scroll to select the current



Start

Back
 Bac

BO Battery Type

III Battery Cell

Bn Battery Type

III Battery Cell

Condition

A Charge Current

A Temp Cut-off

Ύ≣ Task

Start

Back
 Bac

Condition **

Current

Start

⇔ Back

√= Took

Select Battery Cell

Scroll to Battery Cell, call out the menu and scroll to select the correct battery cells.



Start

Short-press the Scroll Wheel to confirm and initiate the program.



Select Task

Scroll to Task, call out the menu and scroll to select the working mode.



CH A CHARGE SETTING

≨ Task Condition A, Charge Current A Temp Cut-off

→ Back

NiMH III Battery Cell Charge -6∆mV 3.0A 50°C Start

Stop

Short-press the Scroll Wheel to stop the program. If prompted to stop, shortpress the Scroll Wheel again to confirm, or short-press the Port button to return.

Pb Lead-Acid Battery Program

Scroll to select the port and short-press to confirm.



ENTER CHARGE SETTING

On the main interface, press the Scroll Wheel to enter CHARGE SETTING



LiHV

NiMH

NiCd

PR

CH A

Y= Took

Condition

Bn Battery Type

III Battery Cell

Bin Battery Type

III Battery Cell

Condition

Current

Start

→ Back

≝ Task

Current

Start

Back
 Bac

Select Battery Type

Short-press the Scroll Wheel to call out the Battery Type menu, and scroll to select Pb.



Select Battery Cell

Scroll to Battery Cell, call out the menu and scroll to select the correct battery cells.



CHARGE SETTING

AGM Charge

Cold Charge

Discharge

Task Select

Scroll to Task, call out the menu and scroll to select the working mode.



III Battery Cell

Condition

Current

′≣ Task

Start

→ Back

Select Condition

Scroll to Condition, call out the menu and set the delta voltage.



4.8A

4 QA

5.0A

5.1A

5.2A

Set Charge/Discharge Current

Scroll to Charge/Discharge Current, call out the menu and scroll to select the current



Start

Short-press the Scroll Wheel to confirm and initiate the program.



CH A Bi Battery Type III Battery Cell ⊻= Task AGM Charge Condition 2.45V Current Contract 5.0A Start Back Bac

Stop


Short-press the Scroll Wheel to stop the program. If prompted to stop, short-press the Scroll Wheel again to confirm, or short-press the Port button to return.

15.

Charger Master

The D100neo offers the convenience of charging and discharging directly from your computer, whether you're using Windows or MacOS. It provides a visual display of various parameters, such as charge time, capacity, charge current, and voltage, presented in a curve format.

- 1. Download the latest Charger Master onto your desktop. Unzip and open it;
- 2. Choose Data for USB work mode in System Setting>USB;
- 3. Connect D100neo to your computer via a USB type-C cable;



4. On the top left panel, choose the expected work mode to initiate the program.

DC Power

- 1. On the main menu, hold the Scroll Wheel for two seconds to enter Charger Setting>DC Power.
- 2. Select the options of DC Power: adjust the output voltage and current.
- 3. Select Start to activate the DC Power working mode.



USB Type-C PD/QC3.0 Output

With the 20W USB-C PD 3.0 charging port, our RC players can enjoy rapid charging speeds like never before. Whether you're charging your smartphones, tablets, or 2020 MacBook Airs, this powerful port ensures that you can fuel up your devices in a fraction of the time.



Voltage Calibration (For expert user only)

You can calibrate the voltage directly on the charger with a 6S LiPo battery. For more information, please contact us at info@skyrc.com

Charge Settings

On the main interface, press the Scroll Wheel to enter Charge Setting: switch between ports A,B,C and D by pressing the Port button, or set parameters as below:

Menu	Definition
Battery Type	Select the desired battery type. (LiPo, Lilon, LiFe, LiHV, Pb, NiMH, NiCd)
I Battery Cell	Select the number of battery cells by different battery type. (Li-xx: 1-6S, Ni-xx: 1-15S, Pb: 3S/6S/12S)
Task	Select the work mode to be performed. (Balance CHG, Charge, Storage, Discharge, etc.)
Condition	Set the cut-off voltage.
A Current	Set the charge or discharge current.
Start	Start the program.
♦ Back	Back to the main interface.

System Setting

On the main interface, hold the Start button for seconds to enter the System Setting.

Menu Option		Definition
	Safety Timer	Customize a period for program protection.
	Max.Capacity	Customize the protection of capacity.
	Trickle Charge	Enable/disable trickle charge.
Task	Li Volt Hold	Enable/disable Li Volt Hold If the difference great than 0.02V between each cells detected, a small current will be applied to keep the battery voltage.
	♦ Back	Back to the previous interface.
	Language	Select the desired language.
	Min. Input Voltage	Set the min. input voltage: 10.0V-24V adjustable
	- LCD BackLight	Adjust the brightness of the screen.
	(1) Volume	Adjust/Turn off the volume of the key and beep.
System Settings	Completion Signal	Choose the way you'd like to be reminded when the program completes. If Repeat is chosen, the charger will play the completion signal every half an hour.
	°° USB	Select the mode of the USB Type-C port: Auto: the charger detects the input of the USB port automatically; Data: connect for communication; Charge: charge the digital devices;
	Warning	Turn on or turn off the warning message which will show up while powering on the charger.
	♦ Back	Back to the previous interface.

19.

Menu		Option		Definition	
	DC Power	V	Voltage	Set the output voltage (2.0-27.0V)	
	(Press the Port	Â	Current	Set the output current. (0.2-10.0A)	
	button to switch between port	D	Start	Enable DC power output and return to the main interface.	
	A,B,C,and D)	♦	Back	Back to the previous interface.	
0	Battery Meter		N/A	Measure the battery voltage and internal resistance. (switch between ports A,B,C,and D ports by pressing the Port button.)	
•	Factory Settings		N/A	Restore to the factory settings.	
▣	System Info		N/A	Check the current system status.	
Θ	Regulatory		N/A	Check the certification information	
1	System Upgrade		N/A	Click to upgrade system firmware.	
♦	Back		N/A	Back to the previous interface.	

Firmware Upgrade

To recover from a firmware upgrade failure, please follow these steps:

- Press and hold the Scroll Wheel, then connect the power cord; D100neo will power on with a blue screen notice.
- 2. Connect D100neo to your computer via a Type-C USB cable;
- 3. Launch the Charger Master on your computer;
- 4. When the status shows CONNECTED, click to check for new firmware;
- 5. Click to upgrade after detecting a new firmware;
- 6. Wait for the progress bar to finish and reach 100%; The process takes about 5 minutes.

Errors and Warnings

In the event of a fault, the charger will display an error message and sound an alarm.

Error Message	Explanation
Error: DC Input Low!	DC input voltage is lower than preset!
Error: DC Input High!	DC input voltage is higher than preset!
Error: Battery Error!	The battery is broken or not detected!
Error: Connection Break!	The battery connection is broken!
Cell Error	The cells do not match.
Battery Type Error!	The battery type is wrong!
Error: Overcharge!	The battery is overcharged!
Error: Over Time!	The program is timed out!
Error: Internal Temp. Too High!	The internal temperature is high!
Error: Over Load!	The charger is overloaded!
Error: Reversed Polarity	The battery connection is reversed.
Error: Fully Charged	The battery is fully charged already!
Error: Outlet Overload	The output is overloaded.
Error: Balance Connection Break	The balance connection disconnects.
Error: Cell Volt Diff.	The voltage difference between each cell is high.
Error: AC to DC Too Low!	The input voltage is too low.
Error: Power Setting Error	The DC power setting is incorrect.

Conformity Declaration

FCC Caution:

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note:

This device has been tested and found to comply with the limits for a Class B digital device, according to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This device generates, uses, and can radiate radio frequency energy and, if not installed and used following the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this device does cause harmful interference to radio or television reception, which can be determined by turning the device off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the device and receiver.
- Connect the device to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Radiation Exposure Statement

This device complies with FCC radiation exposure limits set forth for an uncontrolled rolled environment. This device should be installed and operated with a minimum distance of 20cm between the radiator and your body.

Warranty and Service

Liability Exclusion

This charger is designed and approved exclusively for use with the types of battery stated in this Instruction Manual. SkyRC accepts no liability of any kind if the charger is used for any purpose other than that stated. We are unable to ensure that you follow the instructions supplied with the charger, and we have no control over the methods you employ for using, operating, and maintaining the device. For this reason, we are obliged to deny all liability for loss, damage, or costs that are incurred due to the incompetent or incorrect use and operation of our products, or which are connected with such operation in any way. Unless otherwise prescribed by law, our obligation to pay compensation, regardless of the legal argument employed, is limited to the invoice value of those SkyRC products which were immediately and directly involved in the event in which the damage occurred.

Warranty and Service

We guarantee this product to be free of manufacturing and assembly defects for a period of one year from the time of purchase. The warranty only applies to material or operational defects, which are present at the time of purchase. During that period, we will repair or replace free of service charge for products deemed defective due to those causes.

This warranty is not valid for any damage or subsequent damage arising as a result of misuse, modification, or as a result of failure to observe the procedures outlined in this manual.

Note:

The warranty service is valid in China only.

If you need warranty service overseas, please contact your dealer in the first instance, who is responsible for processing guarantee claims overseas. Due to high shipping costs, and complicated custom clearance procedures to send back to China, please understand that SkyRC can't provide warranty service to overseas end users directly.

If you have any questions which are not mentioned in the manual, please feel free to send an email to info@skyrc.com

SKYRC

The manual is subject to change without notice; please refer to our website for the latest version!

Manufactured by **SKYRC TECHNOLOGY CO., LTD.** www.skyrc.com

